

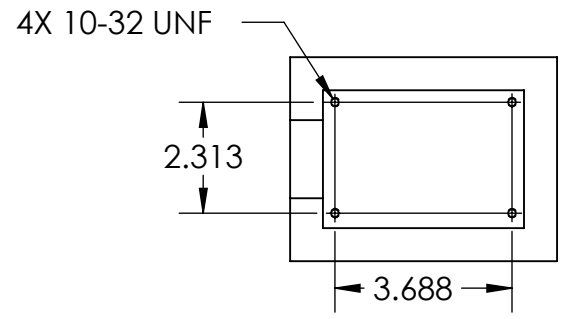
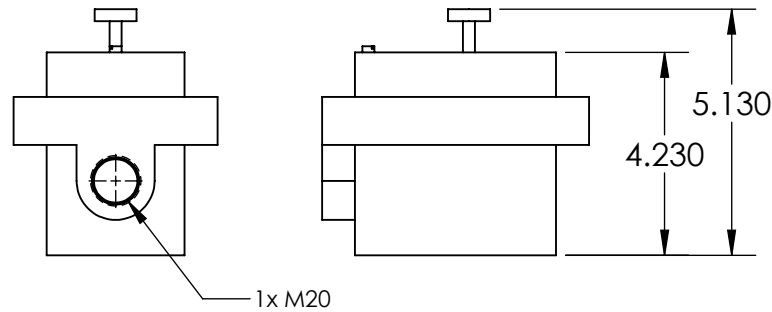


VENDOR	MODEL NUMBER
Metrix Instrument Co.	5550-411-04
Metrix Instrument Co.	5550-311-04

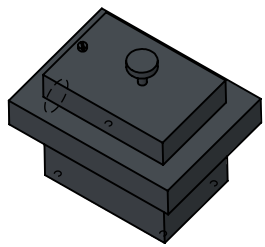

A		Initial Release	RAP	6/11/2020
REV.	ECO NO	DESCRIPTION	BY	DATE

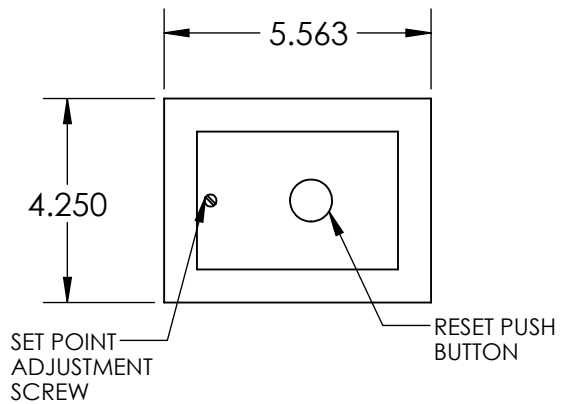

THIS DRAWING IS THE SOLE PROPERTY OF GREAT WESTERN MFG. CO. INC. AND IS PROTECTED UNDER ALL APPLICABLE COPYRIGHT LAWS. THIS DRAWING MAY NOT BE REPRODUCED WITHOUT PRIOR WRITTEN PERMISSION. WE RESERVE THE RIGHT TO MAKE IMPROVEMENTS OR CHANGES. THIS DRAWING IS LOANED SUBJECT TO RETURN ON DEMAND.

UNLESS OTHERWISE NOTED DIMS. ARE IN INCHES AND TOLERANCES ARE AS FOLLOWS:  
MACHINING ±.003 WELDING ±.060 ANGLES ±1°  
FORMING ±.015 ASSEMBLY ±.060

DRAWING NUMBER:  
028-000-481


MODELED BY: KLB DATE: 3/22/2011  
CHECKED BY: DATE:

DESCRIPTION:  
MATL: 3003 Alloy  
MATL #: PURCHASED

SCALE: 1:4 SIZE A

DESCRIPTION: Switch Vibration ATEX SPDT  
Metrix 5550-411-04 Single Pole, Double Throw

Vibratl Switch 6.197 SHEET 1 OF 1

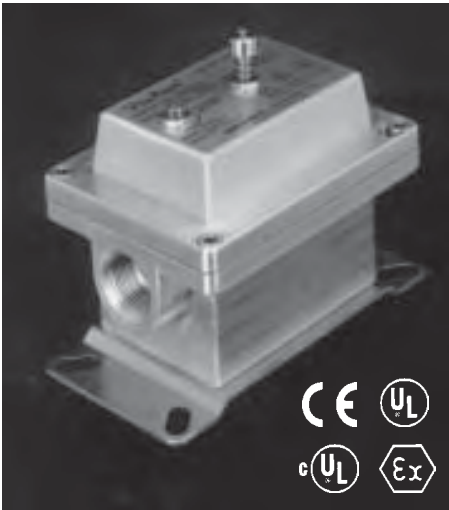

APPLICATION TIPS	BASIC MODEL NUMBER
<ul style="list-style-type: none"> <li>-Lowest cost vibration protection;</li> <li>-Baseplates available to accommodate most previous Metrix or competitor's switch models for easy retrofit.</li> <li>-Watertight &amp; optional hazardous area rated enclosure</li> <li>-Options for built-in start up trip delay and/or remote reset.</li> </ul>	<b>5550</b>

The Model 5550 vibration switch is designed to meet all requirements for mechanical switches in a single, affordable package. This unit provides economical vibration protection for low to medium speed machinery. An inertia sensitive mechanism activates a snap-action switch with SPDT output contacts if the vibration exceeds an adjustable setpoint. The Model 5550 contacts can be used to activate an alarm or initiate equipment shutdown. The housing is weatherproof with an optional hazardous area rating. Electrical (remote) reset with start-up time delay and a second set of SPDT output contacts to accommodate DPDT needs (e.g. separate trip and trip light circuits) are available.

4 Switches

### Features

- Meets all requirements for mechanical switches in one package
- Weatherproof and optional hazard area rating
- Local and optional remote reset with startup delay
- SPDT or (2)SPDT switch output contacts


### Applications

- Heat Exchanger Fans
- Cooling Tower Fans
- Recip Engines
- Recip Compressors

### Application Note:


For an upgrade to velocity (ips or mm/s) monitoring or for dual limits (i.e. separate alarm and trip setpoints), see SW Series electronic switches.

### Typical Installation Diagrams

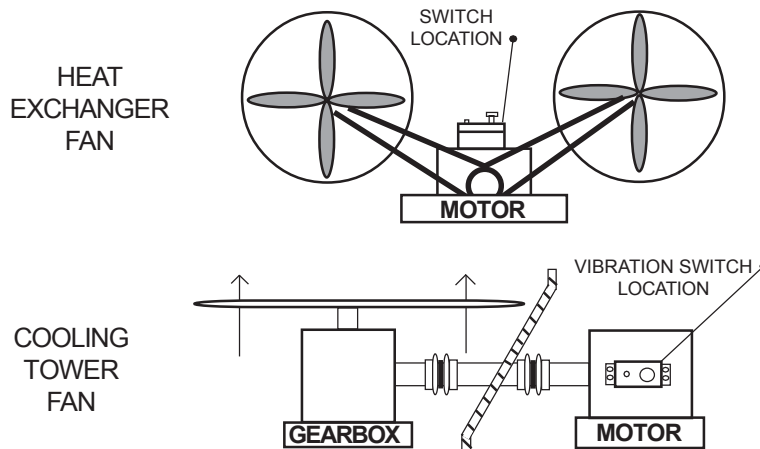


### User Wiring Diagrams

#### SPDT CONTACTS

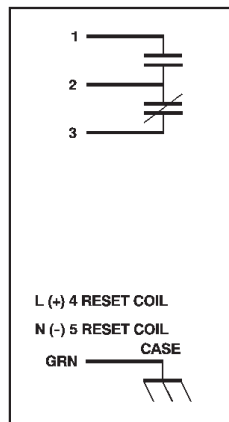

#### (2) SPDT CONTACTS

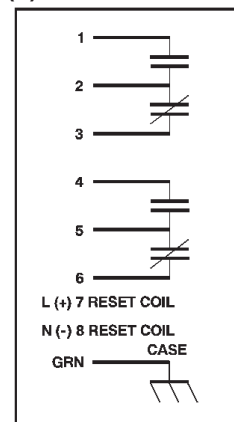

NOTE:  
(2) SPDT contacts and reset coil optional



# VibrAlert® Mechanical Switch Model 5550

## Specifications

**Function:** Armature mechanism trips on high vibration and operates snap action switch(es).

**Vibration Range:** See How to Select "C"

**Frequency Range:** 0 to 3600 RPM

**Set Point Adjust:** 0 to 100% of range. External set point adjustment.

**Reset:** Local reset, plus optional remote reset electrical coil. See How to Select.

**Start Delay:** Applying reset coil voltage at start up holds mechanism from tripping for 20-30 seconds, after which the switch is automatically activated. Requires electric reset option (D\*0).

**Temperature Limit:** -40° to +70°C  
(-40° to +158° F)

**Enclosure:** Cast Aluminum


**Environmental Rating:** NEMA 4, IP 65 & CE mark

**Switch Contact(s) Rating:** 15 amps, 125, or 480 vac; 1/8 hp, 125 vac; 1/4 hp, 250 vac; 1/2 amp, 125 vdc; 1/4 amp, 250 vdc.


**Hazard Rating:** See How to Select "A"

**Weight:** 1.8 kg (4.0 lbs.)

## Internal Mechanism

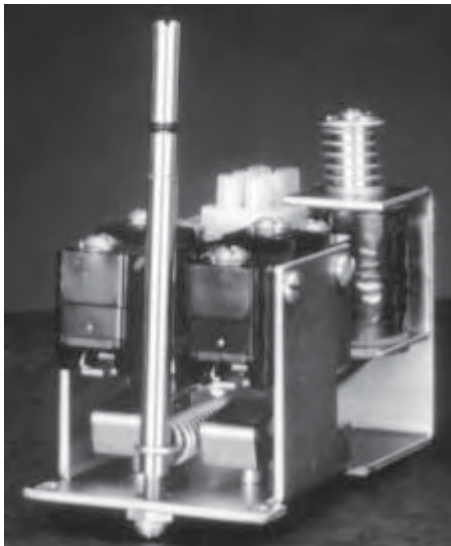

## Model 5550 Weight & Dimensions

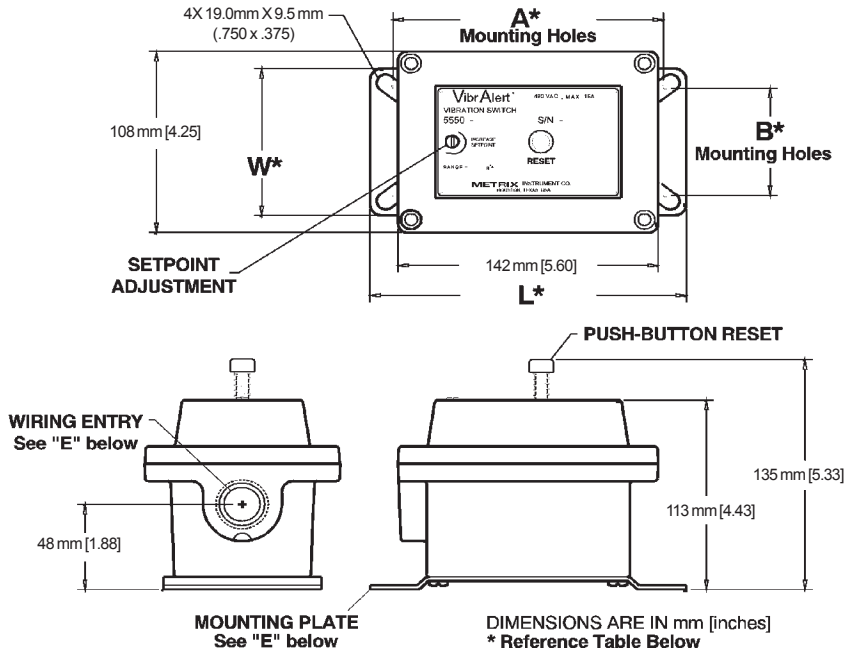

## How To Select...

MODEL A B C D E F  
5550 -    -

Standard  
5550 - 0 1 1 - 0 1

- A**  Hazard Area Rating  
0= None  
1= UL, cUL Explosion Proof  
Class I, Groups C & D, Div 1  
Class II, Groups E, F & G, Div 1  
2= UL, cUL Explosion Proof  
Class I, Groups B, C & D, Div 1  
Class II, Groups E, F & G, Div 1  
3= CENELEC Flameproof  
EEx d IIB T6  
4= CENELEC Flameproof  
EEx d IIB+H<sub>2</sub> T6
- B**  Contacts  
1= SPDT  
2= (2) SPDT (use for DPDT too)

- C**  Full Scale Vibration Range  
1= 5 g  
2= 2 g  
3= 10 g
- D**  Reset Coil & Start Up Delay  
0= None  
1= 115 VAC  
2= 230 VAC  
3= 24 VDC  
4= 115 VDC
- E**  Wiring Entry/Mounting Plate (See Chart below for E)  
1 = 3/4" NPT/Metrix 5173 or 5175  
2 = 3/4" NPT/Metrix 5097; VS-2-EX; 366  
3 = 3/4" NPT/Metrix 5078; 365  
4\* = M20 x 1.5/Metrix 5097; VS-2-EX; 366  
\*FOR E=4, A ≠ 1 OR 2
- F**  Environmental Rating  
1= NEMA 4X

CHART FOR HOW TO SELECT "E"

	(L)	(W)	(A)	(B)
E = 1	165 mm [6.50]	38 mm [3.25]	141 mm [5.56]	59 mm [2.33]
E = 2; 4	152 mm [6.00]	121 mm [4.75]	118 mm [4.63]	79 mm [3.12]
E = 3	165 mm [6.50]	121 mm [4.75]	136 mm [5.37]	92 mm [3.62]

## INSTALLATION OF METRIX MODEL 5550 MECHANICAL VIBRATION SWITCH

This bulletin should be used by experienced personnel as a guide to the installation of the Model 5550 vibration switch. Selection or installation of equipment should always be accompanied by competent technical assistance. We encourage you to contact Metrix Instrument Co. or its local representative if further information is required.

**IMPORTANT: BEFORE PROCEEDING TO INSTALL AND WIRE THE UNIT, READ AND THOROUGHLY UNDERSTAND THESE INSTRUCTIONS.**


**THE SWITCH MODEL NUMBER SHOULD BE CHECKED TO CONFIRM THAT YOU HAVE THE CORRECT HAZARDOUS AREA RATING FOR YOUR APPLICATION. SEE HOW TO ORDER INFORMATION. "A"**

### INSTALLATION:

- 1) The sensitive axis of the vibration switch is perpendicular to the mounting base. The preferred mounting is with the sensitive axis in the horizontal plane, since most machines vibrate more in that plane. Mount the switch solidly to the frame of the machine.
- 2) Remove the cover and wire the switch(es) into the alarm or shutdown circuit. Do not exceed switch contact ratings listed in the specifications. **Keep field wiring away from the moving part of the mechanism.**
- 3) Observe all local electrical codes.




### SETPOINT ADJUSTMENT:

- 1) The vibration setpoint adjustment is accessible externally. Turning the setpoint adjustment clockwise (CW) increases the vibration setpoint.
- 2) When the switch is shipped from the factory, the setpoint adjustment is set to 2g when installed in the vertical position and 1g when installed in the horizontal position (with reference to the setpoint adjustment shaft).
- 3) To check factory calibration, place unmounted unit in your hand and rotate per diagram D. The switch(es) should activate at dead bottom position. If necessary, adjust setpoint using the setpoint adjustment screw.

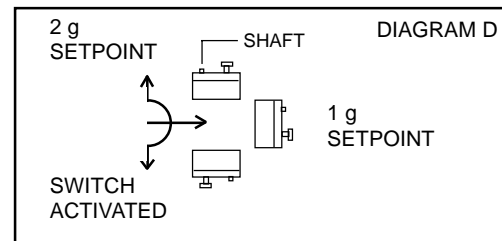

- 4) To preset switch at other than factory setpoint, start with step three (3) and then rotate adjustment screw 1/8 turn per g until you reach the required setpoint.
- 5) To adjust setpoint when installed on the machine, mount and wire the unit. Reset the switch by depressing the reset plunger and start the machine. When the machine has reached full speed, slowly turn the vibration setpoint adjustment counter-clockwise until the switch trips. Then turn the adjustment clockwise a small amount (approx. 1/8 turn). Reset the switch and restart the machine to determine whether the machine starting roughness will cause the switch to trip, in which case it may be necessary to increase the setpoint.

### TYPICAL INSTALLATIONS

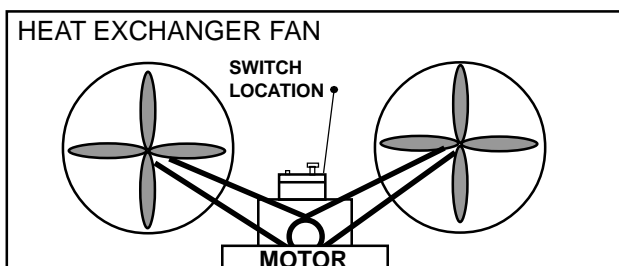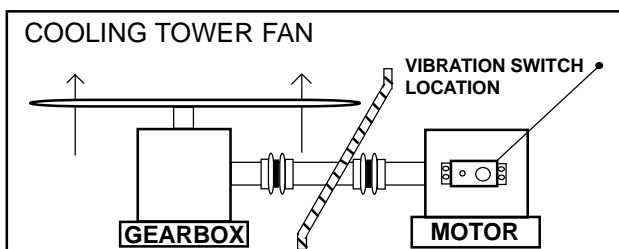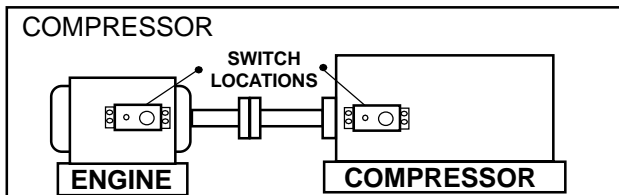

### ELECTRICAL RESET AND STARTUP LOCKOUT:

The optional electrical reset circuit consists of an electrical solenoid in series with a thermistor. If the rated voltage is continuously applied to the reset circuit at machine startup, the reset solenoid energizes for a fixed time interval (approx. 30 sec.), after which time the solenoid is automatically de-energized by the thermistor. This action provides a trip lockout during machine startup roughness. The voltage must be removed from the reset circuit when the machine is stopped to allow the thermistor to cool off. The switch mechanism can then be reset electrically by a momentary application of the reset voltage or it can be reset manually.

**NOTE:** If the machine is restarted immediately after a shutdown, the lockout period will be shortened because the thermistor will be hot. An increase in the ambient temperature will also shorten the lockout period.

## SPECIFICATIONS

**Function:** Armature mechanism trips on high vibration and operates snap action switch(es).

**Amplitude Range:** See How to Order. "C"

**Frequency Range:** 0 to 3600 RPM.

**Setpoint Adjust:** 0 to 100% of range.  
External setpoint adjustment.

**Reset:** Local reset, plus optional remote reset electrical coil. See How to Order. "D"

**Start Delay:** Applying reset coil voltage at start up holds mechanism from tripping for 20-30 seconds, after which the switch is active. Requires electric reset option.

**Temperature Range:** -40°C to 70°C



**Enclosure:** High strength copper-free (4/10 of 1% max) Aluminum alloy.

**Environmental Rating:** NEMA 4, IP 65 & CE Mark (NEMA 4X OPTIONAL)

**Switch Contact(s) Rating:** 15 amps, 125, or 480 Vac; 1/8 hp, 125 Vac; 1/4 hp, 250 Vac; 1/2 amp, 125 Vdc; 1/4 amp, 250 Vdc.

**Hazard Rating:** See How to Order. "A"

**Weight:** 2.1 kg (4.5 lbs.)

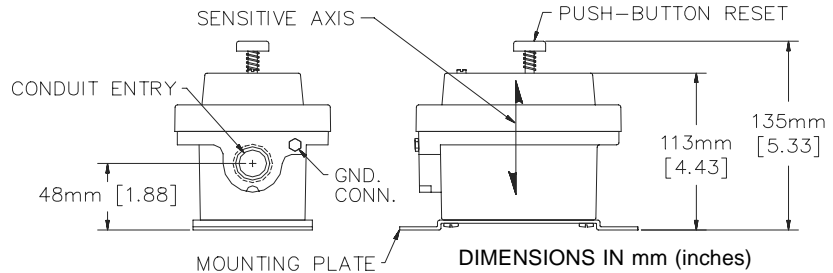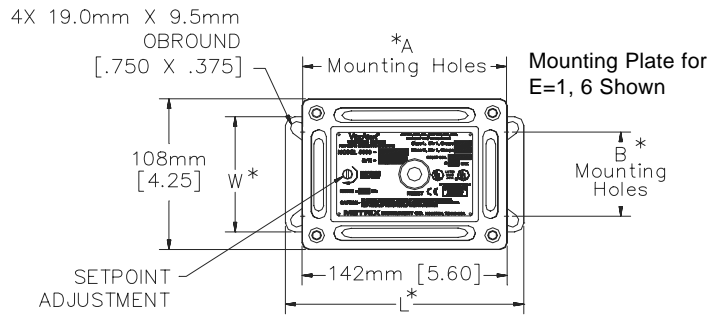

## How To Order...

**MODEL**    **A**   **B**   **C**    **D**   **E**   **F**  
**5550** -    -

**Example**

**5550** - **0 1 1 - 0 1 0**

**A**  **Hazard Area Rating**

0= None

\* 1= UL, cUL Explosion Proof, Class I, Groups C & D, Div 1  
Class II, Groups E, F & G, Div 1

\* 2= UL, cUL Explosion Proof, Class I, Groups B, C & D, Div 1  
Class II, Groups E, F & G, Div 1

3= CENELEC Flameproof, EEx d IIB T6

DEMKO 02 ATEX 0212409

4= CENELEC Flameproof, EEx d IIB+H<sub>2</sub> T6

CE 0600 II 2 GD

**B**  **Contacts**

1= SPDT    2= DPDT

**C**  **Full Scale Range**

1= 5 g    2= 2 g    3= 10 g

**D**  **Reset Coil & Start Up Delay**

0= None    1= 115 VAC    2= 230 VAC    3= 24 VDC    4= 115 VDC

**E**  **Wiring Entry/Mounting Plate (retrofit)**

1= 3/4" NPT/Metrix 5173 or 5175

2= 3/4" NPT/Metrix 5097; VS-2-EX; 366

3= 3/4" NPT/Metrix 5078; 365

\* 4= M20 x 1.5/Metrix 5097; VS-2-EX; 366

\* 5= Same as option 4 above with epoxy coated mounting plate

\* 6= M20 X 1.5 / METRIX 5173 or 5175

7= 3/4" NPT / PMC/BETA 440

\* 8= M20 X 1.5 / METRIX 5078; 365

**F**  **Environmental Rating**

Tested for Compliance with the



0 (or blank) = NEMA 4, IP 65, CE applicable EC Electromagnetic

1 = NEMA 4X, IP 65, CE Compatibility Requirements

## WIRING DIAGRAM

**SPDT**

**DPDT**

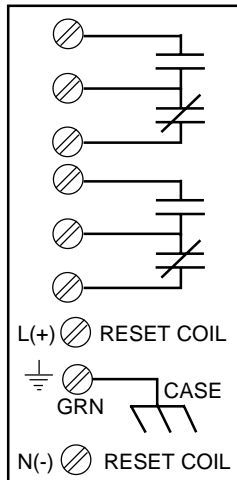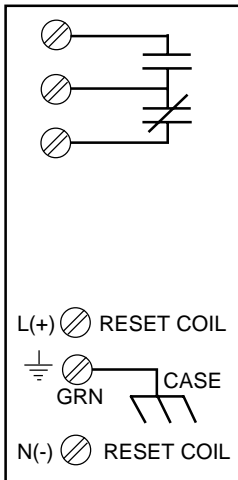

## DPDT CONTACTS AND RESET COIL OPTIONAL

\***Note:** When option A1 or A2 is specified, options E4, E5, E6 and E8 are not allowed.

E=1, 6  
E=2, 4, 5  
E=3, 8  
E=7

	(L)	(W)	(A)	(B)
E=1, 6	165mm [6.50]	83mm [3.25]	141mm [5.56]	59mm [2.33]
E=2, 4, 5	121mm [4.75]	152mm [6.00]	79mm [3.12]	118mm [4.63]
E=3, 8	165mm [6.50]	121mm [4.75]	136mm [5.37]	92mm [3.62]
E=7	114mm [4.50]	127mm [5.00]	71mm [2.80]	108mm [4.25]

## Declaration of Conformity

Manufacturer: Metrix Instrument Co.

Address: 8824 Fallbrook Dr., Houston, Texas 77064

Equipment Type: Model 5550 Vibration Switch

---

### Directive 94/9/EC ATEX

Provisions of the Directive fulfilled by the Equipment:

Ex d IIB + H<sub>2</sub> T6, Ex tD A21 IP 65 T85C

Notified Body for EC-Type Examination:

DEMKO  
UL International Demko A/S  
Lyskaer 8, P.O. Box 514,  
DK-2730 Herlev, Denmark

EC-type Examination Certificate:

DEMKO 02 ATEX 0212409X

Notified Body for production:

Baseefa 1180 Buxton UK

Harmonised Standards Used:

EN60079-0: 2006

EN60079-1: 2007

EN61241-0: 2006

EN61241-1: 2004

---

On behalf of the above named company, I declare that, on the date the equipment accompanied by this declaration is placed on the market, the equipment conforms with all technical and regulatory requirements of the above listed directives.

